



DRYSAN OXY WIPES

Highly effective no-rinse cleaner & disinfectant wipes. Based on Hi-speed H₂O₂™ Technology, fragrance-free formula compatible with a wide range of surfaces, also surfaces in direct contact with food.

Performance matters...

- Pre-impregnated disposable wipes
- Convenient and fast in use
- Disinfects, degreases and decalcifies and eliminates odors on multiple surfaces
- Saves time: disinfects & cleans in one step
- Excellent material compatibility and cleaning performance
- Short contact times
- No rinse required
- Cleans and disinfects up to 60 m²

Safety matters...

- Based on Hi-speed H₂O₂™ Technology
- Active ingredients decompose into water and oxygen when used
- Workplace safety: No PPE required

Sustainability matters...

Making a positive environmental impact

- 100% solvent, quat, phenol and chlorine free formula
- 100% Propylene, low linting material




Part No:	R111
Packaging:	6 x 160 pcs
Size of 1 Wipe:	19 x 21 cm
Storage:	Product should be stored in original closed container between 5-25°C in a cool, dry location out of direct sunlight.

NOTE: Do not mix with any other product. For professional use only.




INSTRUCTIONS FOR DRYSAN OXY WIPES

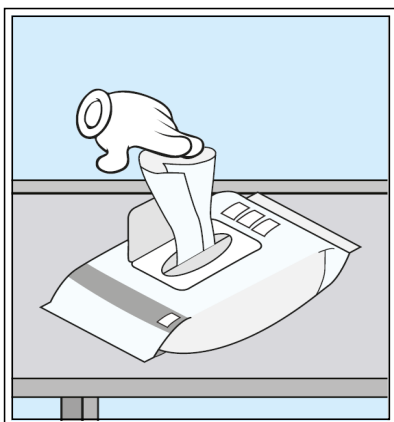


Unplug all electric equipment before cleaning. Gloves recommended for hygiene reasons.

Apply DrySan Oxy Wipes to clean the surface.

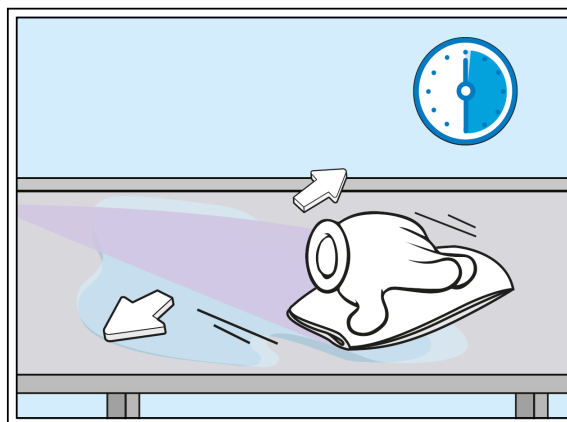

Wipe the surface ensuring it is completely wet. Allow the product to work for the indicated contact time to disinfect the surface. Dispose used Wipe.

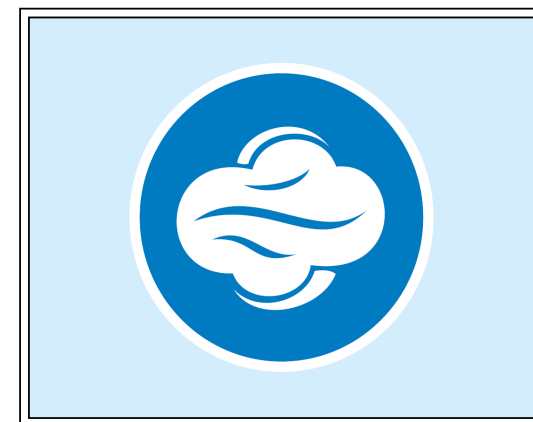

No rinse required.
Allow to air dry.



CONTACT TIME AND NOTES FOR DRYSAN OXY WIPES

European standard (clean and dirty conditions)	Contact time
EN 13727 (bactericidal)	1 Min.
EN 13697 (bactericidal)	5 Min.
EN 13697 (yeasticidal)	5 Min.
EN 13624 (yeasticidal)	15 Min.
EN 13624 (fungicidal)	15 Min.
EN 14348 (tuberculocidal, mycobaktericidal)	30 Min.
EN 14476 (adenovirus) clean and dirty conditions	1 Min.
EN 14476 (norovirus) dirty conditions	60 Min.
European standard 4-field-test (dirty conditions)	
EN 16615 (bactericidal)	5 Min.
EN 16615 (yeasticidal)	1 Min.
EN 16615 (fungicidal)	5 Min.
EN 16615 (tuberculocidal, mycobaktericidal)	60 Min.

DrySan Oxy Wipes can be used directly on surfaces in contact with food as well as on all alcohol-resistant surfaces. Since there are many different materials, we recommend to test compatibility before large-scale use. Examples: tables, conveyor or similar surfaces that come into contact with food.

Notes

- Do not use on porous surfaces sensitive to acid or oxidative agents such as marble, copper or brass
- Active substance: 100 g contains 1 g hydrogen peroxide

Safety

- Use biocides safely.
- For professional use only.
- Always read the product information before use.
- For further information and safety instructions see safety data sheet.
- Do not mix with any other product!
- Dispose of packaging only if emptied and closed.